


Mini Louvers are used to seal existing rafter/bird block vent holes to maximize airflow while protecting against rodent and insect invasion.

If there are no pre-existing birdblock holes, use a hole saw drill bit to cut holes to the nominal size of the Mini Louver Vent: 2, 3 or 4 inch.

Lightly tap in the vents to pressure fit.

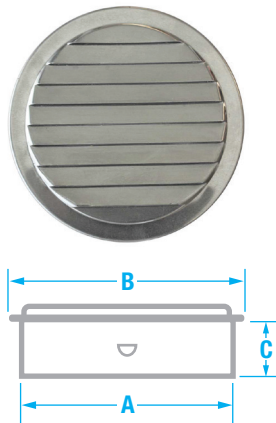

A: Stem diameter
B: Face diameter
C: Stem depth

	A	B	C	N.F.V.
ML2	1.88"	2.31"	0.5"	0.47"
ML3	2.88"	3.50"	0.63"	1.34"
ML4	3.88"	4.31"	0.63"	2.88"

Note: N.F.V. value is square inches.